


GUIDE BOOK

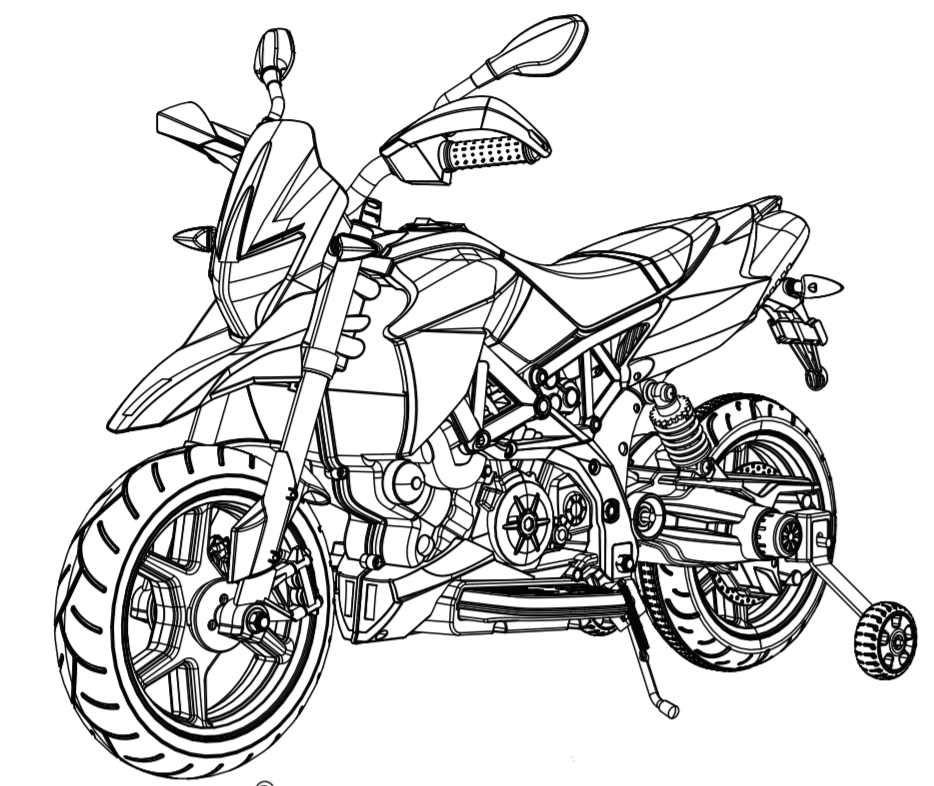

Aprilia® is a registered trademark owned by Piaggio & C. S.p.A. and used under license by Shanghai Happy Children Factory
The car must assembled by adults. Picture only for your reference, products features may vary from the pictures in book, configuration based on your order!

CHOKING HAZARD--Small parts, it is not for children under 3 years!
Please read the operating instructions carefully before using.

Table of Contents

- 1 Brief Instruction And Models----- 01
- 2 Important Safety Instructions----- 02
- 3 Parts List----- 04
- 4 Battery Line Connector ----- 05
- 5 Assembly Steps----- 06
- 6 How To Operation Your Vehicle----- 08
- 7 Charging The Vehicle----- 09
- 8 Caring For Your Vehicle----- 09
- 9 Problems And Solutions Guide----- 09
- 10 Disposal Of Battery----- 11
- 11 Additional Explanation ----- 11

Thank you for choosing our vehicle. Each vehicle pattern is designed upon a unique mold: such as the realistically imitated vehicle and cute series, which bring different fun and feeling for your children.
We wish our vehicle to accompany your children for a happy childhood and your family will be filled with joy and happiness.

Suitable Age:	37-95Months	Load Capacity:	Under 25KGS
Motor	RS390/12V/13000RMP	Size Of Car:	108x52x71CM
Charger:	Input:110 or 220V 50HZ Output: DC12V 700MA	Battery:	12 V-4.5Ah or 12 V-7Ah
Power Way:	Charging Type	Charging Time:	8-12 Hours
Fuse:	10A	Average Battery Life:	Approximately 300 Times

Manual book only for your reference, all configuration based on your order!



Read carefully and follow all the instructions

WARNING ! CAUTION

Assembly/Used

- Product requires adult assembly.
- Care should be taken in unpacking and assembly of the vehicle.
- Children should not handle parts, or help in assembly of the vehicle.
- Samll assembling parts have choking danger, forbidden to children's play. This product is forbidden to children under 3 years.
- Always properly handled the protective material and poly bags before assembly. Forbidden to children's play and have suffocation danger!
- Suitable for age 37-95 months; Maximum user weight is 25 Kgs.
- Direct Adult Supervision Required: Never leave child unattended by himself. Always keep child in view when he is in vehicle. Teach safety rules to your child before allowing operation of this vehicle. These rules should also be reviewed with other playmates who want to drive this vehicle. Make sure children know and follow these rules for safe driving and riding.
- Always wear shoes.
- Always sit on the seat with safety belt.
- Always wear a helmet when riding. Only one rider at a time.
- Keep children within safe riding areas, these areas must be:
 - Warning. Not to be used in traffic. Away from steps/cars/driveways /roads and alleys.
 - Away from sloped/inclined surfaces/swimming pools or other wet place.
 - Away from other dangerous places.
 - Only outdoors. Generally flat ground/playground and other hard surfaces. Play in daytime, avoiding in rainy or dark day, or maybe occur danger.
- Warning. This toy has no brake. Before using, adult should check the main components whether the car whether in good condition. Battery plug should be plugged in, power is switched; battery/charge/wire/plug/car body and other parts whether is damage; whether screw loose; whether have another damage problems.
- To avoid using damaged car until it repaired.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- To avoid damaging the motors and gears, stop the vehicle before shifting from forward to backward switch.
- Please turn forward/stop/backward switch to "0" in the state of no-driving. Turn off power switch.(notice: this switch only control the parts of drive.)

Special explanation

WARNINGS

- The product is not a transport, do not drive on the street, using the product under adult's guardianship.
- Do not allow children under 36 months use the product.
- Overage and overload are forbidden. Maximum load: 25KG.
- The car should be assembled and checked by adults, guarantee safety before using.
- Do not wash the product with water, wiping the car using a soft wet cloth only.
- Battery charging should be handled by adult only, the charging is not toy, do not let children play the charger.
- Driving on public avenue, street, slope, pool side, stair head and other danger area are strictly forbidden.
- Do not use this product in high-voltage line, transfomer station, gas station, hospital.
- Must use this product with shoes, with safe-belt.
- Please read carefully and keep this manual book for your children's safety.
- In order to prevent a child from suffocation, keep plastic bags away from children.

Important Safety Instructions

Do not throw into a fire. The battery may explore or leak.
Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
Return an exhausted battery to your local approved lead-acid battery recycle.

Disposal Of Battery

Assembly/Used

power switch, multiplayer player, high-low speed switch (optional), horn, forward-backward switch, foot pedal

All switches are on the dashboard of the car.
For high-low speed switch is option, only customer choose this dispose the car will have.

- Forward: 1. Press the "forward-backward switch" on the "forward" position. 2. Press the "foot pedal", the vehicle drives forward.
- Stop: The vehicle will brake automatically, when your child's foot is lifted from the "foot pedal".
- Back Up: 1. Press the "forward-backward switch" on the "backward" position. 2. Press the "foot pedal", the vehicle will back up.
- High-Speed: Press the "high-low speed switch" on the "high" position, the car will go fast. Press the "high-low speed switch" on the "low" position, the car will go slowly.

Pls note for high-low speed and mp3 function just for your reference, all configuration depend on your order!

Do not close to the ear, improper use can cause hearing damage.

Problems And Solutions Guide

Cause: Thermal fuse has tripped. The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly, the self-resetting fuse will be cut off for 5-10 seconds, then restart again. The self-resetting fuse is under the seat. (refer to the picture)

10 A

- Cause: battery connector or wires are loose
Make sure the battery connectors are firmly plugged in to each other. Please contact retailer or manufacturer.
- Cause: battery is dead
Please contact retailer or manufacturer.
- Cause: electric system is damaged
Please contact retailer or manufacturer.
- Cause: motor is damaged
The motor needs professional repair. Please contact retailer or manufacturer.

Problem: The battery will not recharge

- Cause: battery connector or adaptor connector is loose. Make sure the battery connector and adaptor are firmly plugged together.
- Cause: charger is not plugged in. Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.
- Cause: charger is not working
Is the charger warm while charging? If not, the charger may be broken and please connect retailer and manufacturer.

Problem: The vehicle does not run very long

- Cause: battery may be undercharged
You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8-12 hour. Do not charge over 18 hour.

Important Safety Instructions

Do not let any child touch the wheels or near them when the car is moving. Do not tow anything behind the vehicle or overload it, do not exceed the maximum weight capacity of 25 kgs.

Battery/Charger/Alkaline Batteries

- The battery/ charger/ alkaline batteries are not toy, forbidden for children playing.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Battery charging must be done by adults only.
- Insert batteries are correct polarity inside the battery compartment. (Like the picture)
- Remove exhausted batteries from the product.
- Remove batteries during long periods of non-use.
- Never short-circuit the battery terminals.
- Use only with manufacturers prescribed rechargeable battery and charger.
- Do not use the battery or charger for any other product. Could cause overheating, fire or explosion.
- Do not open the battery and the charger
- Do not charge battery upside down.
- Always maintain battery dry. Do not let the vehicle contact fresh water or salt water.

Charge

- Charge 4-6 hours before the first time using, but not charge over 10 hours.
- Only adult can handle or charge the battery. Never allow children to do that. Turn off power switch before charging the battery.
- Connecting correct polarity when charging.
- Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charge or the battery until you have replaced the worn or damaged parts.

When the vehicle's normal speed apparent slow down or after each use, recharge the battery for 8-12 hours, never charge the battery longer than 18 hours.
Charge the battery in a dry area ONLY.
It is normal that charger and battery are tepid while charging.
Charge the battery at least three months one time, even if the vehicle has not been used.
In room temperature below 5 degrees centigrade, charging the actual to lengthen 3-5 hours. Below -5 Celsius please do not use this product.

How To Operation Your Vehicle

Note! 1. when changing the tap position, please make sure the vehicle has completely stopped, otherwise it will damage the gear box and moto

power switch, multiplayer player, high-low speed switch (optional), horn, forward-backward switch, foot pedal

All switches are on the dashboard of the car.
For high-low speed switch is option, only customer choose this dispose the car will have.

- Forward: 1. Press the "forward-backward switch" on the "forward" position. 2. Press the "foot pedal", the vehicle drives forward.
- Stop: The vehicle will brake automatically, when your child's foot is lifted from the "foot pedal".
- Back Up: 1. Press the "forward-backward switch" on the "backward" position. 2. Press the "foot pedal", the vehicle will back up.
- High-Speed: Press the "high-low speed switch" on the "high" position, the car will go fast. Press the "high-low speed switch" on the "low" position, the car will go slowly.

Pls note for high-low speed and mp3 function just for your reference, all configuration depend on your order!

Battery Connector

Make the screw loosen from the seat, take down the seat, then connect the battery line red wire to the red column on the battery, black wire to black part. Avoiding inserting into the incorrect polarity. After that please put the seat on the car body again, then tighten the tapping screw and fix it properly.

red terminal, red wire, black terminal, black wire, battery

Inserting red wire on the car into red column on the battery.
Inserting black wire on the car into black column on the battery. (Avoiding inserting into the incorrect polarity)

Do not close to the ear, improper use can cause hearing damage.

Packing List

Please identify all parts before assembly and save all packaging materials until assembly is complete.

- 1 Main Body
- 2 Side Wheels
- 3 Handlebar
- 4 Handlebar Protector Assembly
- 5 Front Fork
- 6 Motor Head
- 7 Fender
- 8 Front Wheel
- 9 Front Wheel Axle
- 10 Mirror
- 11 Seat
- 12 Tailstock
- 13 Screw Package
- 14 Manual Book
- 15 Charger

Charging

- Plug the charger port into the input socket.
- Plug the charger plug into a wall outlet. The battery will begin charging.

Caring For Your Vehicle

- Vehicle body is modeled by polypropylene. Solarize or in -15°C use are strictly prohibited. Vehicle should be far away from hot objects, like an oven and heater, plastic parts may melt beside.
- Avoid operating the vehicle in wet or snowy conditions, and do not spray the car with a hose. Do not wash the vehicle with soap and water. W motors or electrical switches can cause them to corrode and can cause switch or motor failure.
- Avoid operating the vehicle on sand, loose dirt or gravel. Sand, loose dirt or gravel in the motors or electrical switches can cause them to jam, and could cause switch or motor failure.
- The vehicle can be wiped down with a soft, dry cloth for a shiny finish, you can wipe plastic parts with a non-wax furniture polish applied to a soft-cloth. Do not use automotive wax. Do not use soap or water or spray the vehicle with a hose.
- Do not modify the electric system. When the fault appears and they must be maintained by professional. Alterations could cause a fire resulting in serious injury and can also ruin the electrical system.
- Use for about half month, check the wheels turning agily or not, motor work is normal or not. Using infuse lube to lubricate moving parts.

Problems and Solutions Guide

Problem: The vehicle does not run

- Cause: The battery may low on power. After each use and once a month minimum, charge the battery for 8-12 hour. Do not charge over 18 hour.

Assembly Steps

Please note before using the product, must assembled by adult according this manual book.

Step 1: Put the side wheels into the back axle two sides, then put both gaskets and antiskid nuts each side, tighten them.

Step 2: Remove two screws with a screwdriver which the handlebar protectors fixed on the front fork, then insert the handlebar into the front fork hole and fix handlebar protectors with screws.

Step 3: Insert the motor head into the front fork hole, then tighten with five screws.

Step 4: After fixing the rear handlebar cover and the handlebar alignment holes, the front handlebar cover is combined and installed, and then the left (right) cover and the rear cover are tightened and fixed with five screws.

Step 5: Fix the front handlebar cover and the handlebar alignment holes, then tighten them fixed with one screw on each side.

Step 6: Insert the fender into front fork hole, then tighten with four screws. After that, insert the cornering lights into motor head two sides.

Step 7: Set the front wheel part to the front fork terminal sides, make the front axle according the front axle hole, front wheel hole, front wheel part hole, then each sides put one gasket, tighten antiskid nuts at left and right ends.

Step 8: First take out the screw nut which can fixed the motor body. Make the motor head terminal insert to the motor body terminal together and plug the finishing line into the motor head hole. Then make one line the head and front hole together with the motor body, make the screw nut through the holes, tighten antiskid nuts.

Step 9: Alignment of rear bent with body hole, tighten with three screws. After that, insert the cornering lights into motor back two sides.