

Guide Book

- Light-sensitive electron assisted steering wheel
- R/C controls forward/backward and left/right, remote control priority
- Music
- Volume adjustment and MP3
- Power display
- Forward and backward
- High and low speed
- Bluetooth
- USB
- TF card
- MP4(Optional)



Parts List:(Name and Quantity)

Name	A	B	C	D	E	F	G	H	I	J				
	Car body	Front axle assembly	Rear axle	Motors	Front bumper	Front wheels	Rear wheels	Windshields	Rearview mirror	Front fender				
Quantity	1	1	1	2	1	2	2	1	2	2				
	K	L	M	N	O	P	Q	R	S	T	U	V	W	X
	Bracket	Lamp holder	Seat	Right/left lamp holder	Little wheel cover	Steering wheel	Remote control	Charger	Big washer	Small washer	Nut	M4*10	M4*16	Cotter pin
	2	1	1	2	4	1	1	1	6	1	4	24	10	1

LEAN CARRS

WWW.LEAN-CARRS.PL


Product Specifications:

Name	Specification
Battery	12V7A*1, 12V7A*2
Suitable age	37-95 months
Loading capacity	35kg
Product size	123*88*80cm
Speed	3-5 km/h
Charge/Use time	charge 8-10h, use 1-2h
Charger	Input: 220V-240V Output: 12V DC 1000mA (Input: 220V-240V Output: 24V DC 1000mA is optional)
Remote control	AAA1.5V

The above parameters are selected by the customer, and the specific parameters shall be subject to the actual sample.

Function

Picture for reference only, please check your buying.

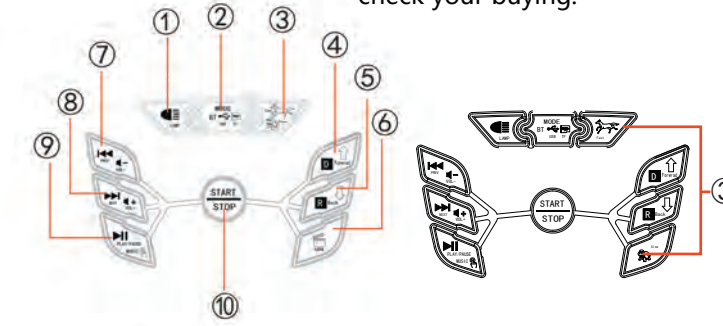

12V Console

24V Console

Button function	⑥MP4
① Light	⑦Music switch/Volume -
② Multifunction	⑧Music switch/Volume +
③ High/low speed	⑨Music
④ Forward	⑩Power
⑤ Backward	⑪ Bluetooth


Remote control function and explanation

Do not swift forward/backward button when car is driving, or will damage the motor.

Remote control can be used normallywhen battery assembled.

Remote control should be usedunder adults' supervision.

Remote control is prior to man control.

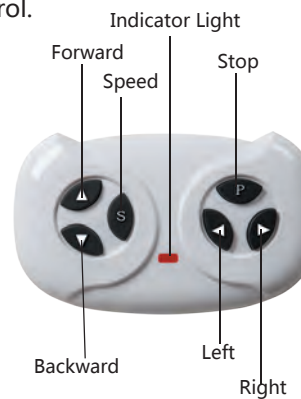

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

Remote control battery operation

Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.

New and used batteries can not be used mixed.

Do not insert batteries into wrong polarity, or will be short-circuited.

Non-rechargeable batteries can not be recharged. Exhausted batteries should be replaced by adults.

The exhausted battery must be handled and operated properly by adults only. Do not be played by children.

WARNING: The toy is to be assembled by an adult.

In unassembled state contain potentially hazardous sharp points, sharp edges and small part,so please keep out of baby' s reach

Warning : Not to be used in traffic.